

Fubbles[®]

NO-SPILL[®]

Big Bubble Bucket[®]

3⁺

**Tip
Upside
Down - It's
No-Spill!^{*}**



*Product is designed to prevent accidental bubble spills. See "Notes to Parents" on back of label for more information.

How to Play

1. Prior to the first use, all parts **MUST** be washed in warm soapy water. This will ensure the best performance of the toy.

2. Open bucket, cut the fastener and discard to release the bubble wands.

3. Pour bubble solution (not included) into the bottom of the bucket.

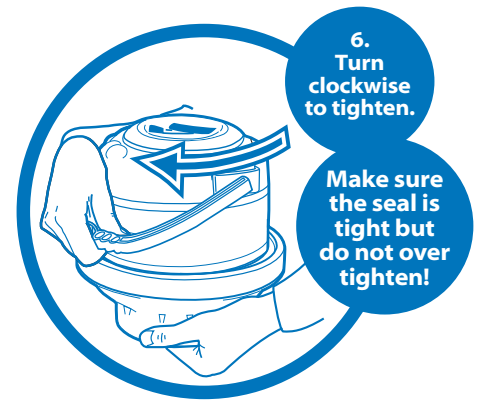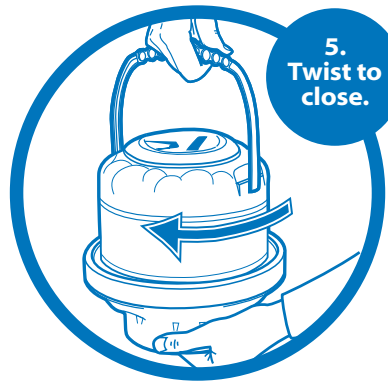

Notes to Parents^{*}

- The No-Spill Big Bubble Bucket[®] is an outdoor toy. This toy was designed to prevent accidental bubble spills that can occur when children drop or knock over the toy during normal play. If the toy is shaken vigorously, liquid may escape from the top of the bucket, which is not sealed.
- All bubble toys work best once they are "primed". We found that the wands started blowing great bubbles after 6 dips.
- After prolonged use, it may be necessary to clean the Big Bubble Bucket[®] to remove built-up foam.
- Before storing, the bucket should be emptied and washed in warm soapy water. Be sure to clean the top and bottom threads of bucket.
- Keep packaging away from children and discard properly.