



Ages 4 & up

 
SpongeBobTM SquarePants SNO-CONE MAKER

INCLUDES: Sno-Cone Maker, Ice Shaver, Hand crank, Locking cap, Bottle with cap, Spoon, Pineapple decoration, 5 paper cups, 1 Wyler's® tropical punch flavor packet.


Note to Parents:

- Read instructions thoroughly before use. Adult supervision is suggested with younger children. Not intended for children under 3 years. Handle ice shaver with care.
- Do not wash the SpongeBob SquarePants Sno-Cone Maker in the dishwasher or in hot water.
- Wash all components of the Sno-Cone Maker with warm, soapy water before use.


- 1.** Fit small end of shaver through hole in front of Sno-Cone Maker as shown. **VERY IMPORTANT - INSERT SHAVER THROUGH FRONT OF MAKER ONLY.**

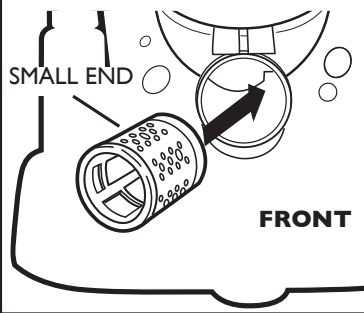

 
- 2.** Fit shaver handle into hole in rear of Sno-Cone Maker so that notches on handle fit over tabs on shaver.

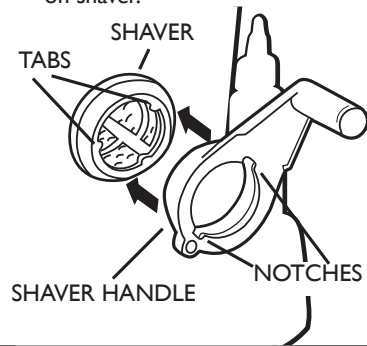

 - 3.** While holding front rim of ice shaver, fit notches on locking cap between tabs on shaver. Turn locking cap clockwise until it locks into place.

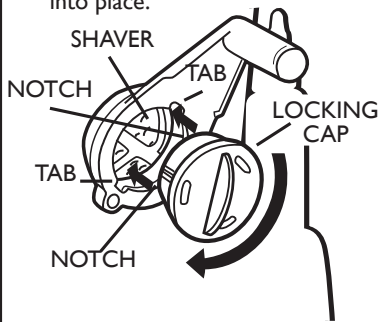

 - 4.** Insert Krabby Patty Chef hat into ice chute.

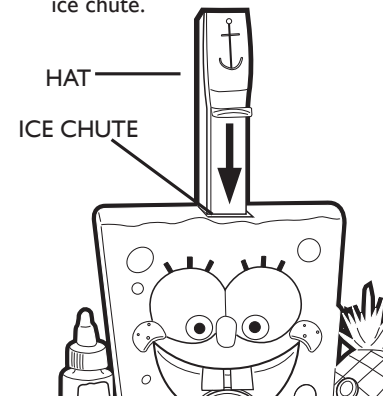

How to Make Flavoring

1. Combine 1 cup of sugar (to taste), 1/2 cup water and 1 envelope of Wyler's® flavor packet in a large pitcher. Stir ingredients until sugar and flavoring are completely dissolved.
2. Pour syrup carefully into syrup bottle. Fit syrup bottle top onto syrup bottle. Be sure bottle top is on securely. **DO NOT OVER FILL BOTTLE.**

How to Make Sno-Cones

1. Remove Krabby Patty chef hat and drop one ice cube into the top of the chute.
2. Begin to turn ice shaver handle clockwise about 5 times without applying pressure. Gently apply pressure to the Krabby Patty Chef hat while continuing to turn ice shaver handle.

 
CAUTION: PUSHING DOWN ON THE CHEF HAT PRIOR TO TURNING THE HANDLE MAY RESULT IN JAMMING THE SNO-CONE MAKER.

Continue turning the handle clockwise until the ice cube has been completely shaved.

3. Repeat steps 1-2 until you have enough shavings to make a sno-cone.
4. Scoop the ice shavings into one of the paper cups.
5. Squeeze bottle to squirt Wyler's® flavoring over the ice shavings until saturated.

Washing and Cleaning Instructions

To clean your Sno-Cone Maker, rinse with warm (not hot) water and wipe dry. If further cleaning is desired, remove the shaver handle from the machine. After each use, shake out any water or ice particles left in the machine.

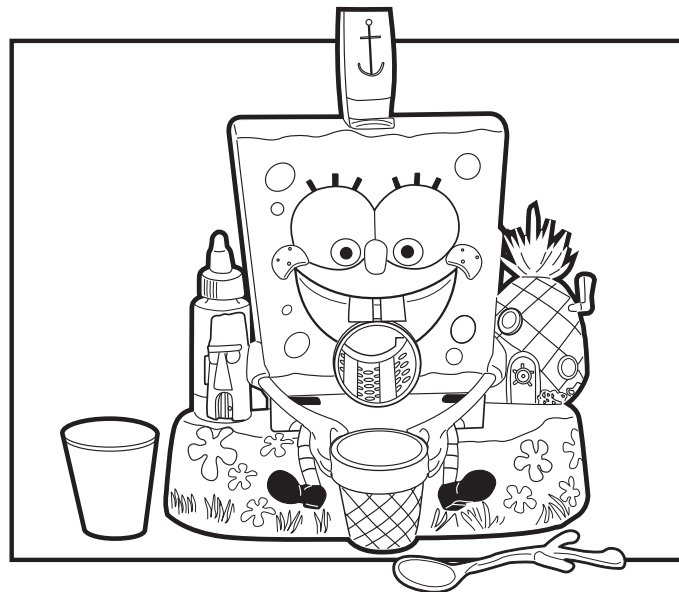

Additional Hints and Suggestions

Additional packets of Wyler's® flavoring can be purchased at your local supermarket or grocery store.

You can also try filling an ice cube tray with lemonade or any fruit juice and freezing it. Now, place the cubes, one at a time, into the maker and grate. This way you can make flavored snow with or without extra syrup flavoring.



WARNING:

**CHOKING HAZARD - Small parts.
Not for children under 3 years.**

©2001 Viacom International Inc.
All rights reserved.
SpongeBob, SquarePants and all its related titles, logos and characters are trademarks of Viacom International Inc.
Created by Stephen Hillenburg.

©2001 Little Kids, Inc., 222 Richmond Street, Providence, RI 02903.
All Rights Reserved. 1-800-LIL-KIDS